 


User Manual

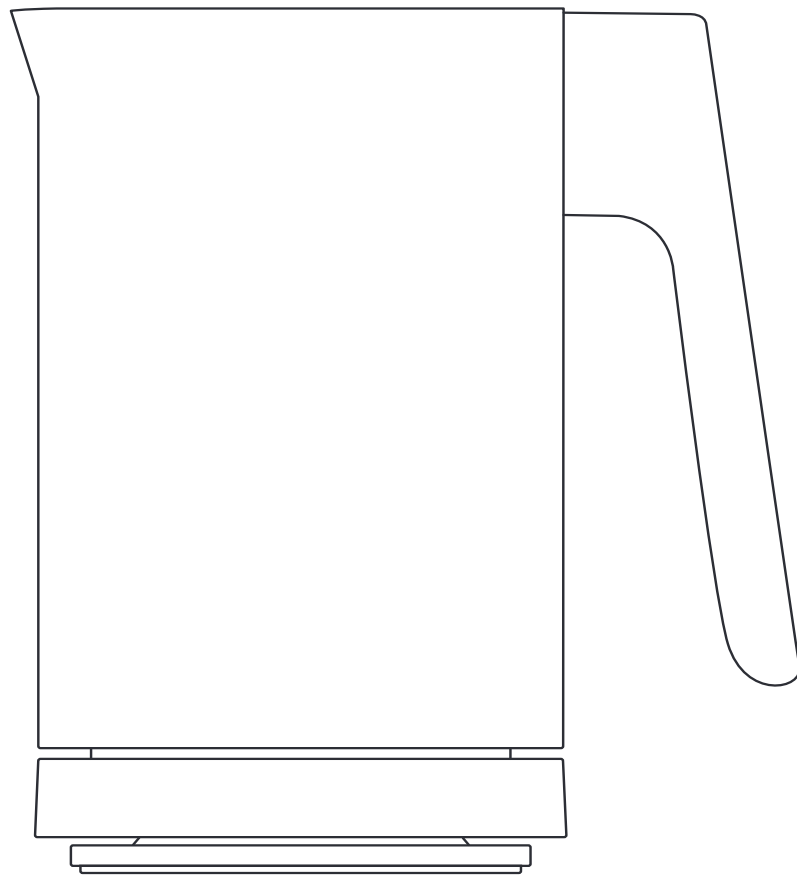 


Electric Kettle

Model: KES4192-GS

1,2 litre

Jacob Jensen

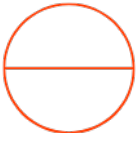


Congratulations on your new Jacob Jensen® product.

Jacob Jensen embodies the honesty and simplicity of our founder's vision, focusing on the essentials of the product experience. Your new purchase pushes the boundaries of everyday objects, combining function with meaningful design.

Created with our principles of Distance, Closeness, and Touch, this product reflects our long design legacy, enhancing everyday life through thoughtful design.

 
We hope you will enjoy an elevated experience. For more information, visit jacobjensen.com.

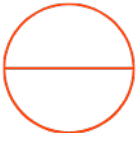

Product by
F&H Group A/S
Gl. Skivevej 70
8800 Viborg
Denmark

Read the instructions included in this user manual before using the Electric Kettle and save it for future reference.

1. Safety Instructions	3
2. Product Overview	6
3. Using your Kettle	7
3.1 Preparation before First Use	7
3.2 How to use your Electric Kettle	7
3.3 Special Features	8
4. Care and Maintenance	9
4.1 Cleaning	9
4.2 Descaling your Kettle	9
5. Disposal Guide	10
6. Power Consumption	11

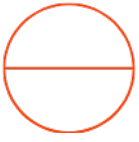 


We recommend that you read this user manual carefully. It contains instructions on how to use your new purchase correctly and how to maintain its functionality with regular use.

Jacob Jensen and our partner F&H Group A/S reserve the right to make improvements to enhance the product experience without prior notice.

The instructions and illustrations in this manual are not binding and may change as the product evolves.

 
For more information, visit jacobjensen.com or contact our partner, F&H Group A/S, at info@fh-as.dk.

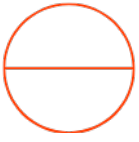


1. Safety Instructions

When using this electrical appliance, basic safety precautions should always be followed. Read the following instructions carefully to ensure safe use of your Electric Kettle.

 - Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using the kettle.
- Do not let the cord hang over the edge of a table or counter or touch a hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not operate the appliance without water in it to avoid damaging the heat elements.
- Ensure that the kettle is used on a firm and flat surface out of reach of children. This will prevent the kettle from overturning and avoid damage or injury.
- To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
- While water is boiling, or just after the water has been boiled, avoid contact with steam from the spout.
- Always be careful and pouring boiling water slowly without tipping the kettle too fast.
- Be careful refilling when the kettle is hot.
- Do not touch the hot surface. Use the handle or the button.
- Extreme caution must be used when moving an appliance containing hot water.

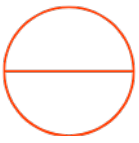

- This appliance can be used by children aged from 8 years and above, if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- The attached base cannot be used for anything other than the intended use.
- The kettle is for household use only. Do not use outdoors.
- The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
- Unplug the kettle from the outlet when not in use and before cleaning. The heating element surface is subject to residual heat after use. Allow the kettle to cool down before cleaning and maintenance. Details on how to clean the appliance, please refer to the 'Care and Maintenance' in this User Manual.
- To disconnect, abort any running boiling process, then remove plug from wall outlet.
- If the cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The appliance is only intended for boiling water. Do not use the appliance for other than the intended use.
- The kettle can only be used with the base provided.

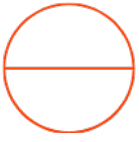 

- If the kettle is overfilled, boiling water may spill out. To avoid spillage on the connector, do not overfill the kettle.
- Always ensure the lid is closed and do not open it while the water is boiling. Scalding may occur if the lid is opened during the brewing cycles.
- This appliance is intended to be used in a household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.

Save these instructions.

 


This mark on a product and/or accompanying documents indicates that when it is to be disposed of it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge. If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be saving valuable resources and preventing potential negative effects upon human health and the environment from hazardous materials that the waste may contain.




This product is CE marked in accordance with applicable EU legislation. The CE marking confirms that the product complies with all relevant health, safety, and environmental protection requirements set by the EU.

The CE marking means that the product has been assessed and tested to ensure it can be safely used in EU countries and complies with EU directives for electrical and electronic equipment. For more information about specific product requirements, please contact the manufacturer.

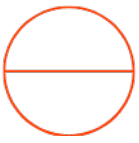

2. Product Overview

 - A.** Spout
- B.** Lid Button
- C.** Display
- D.** Touch-display
- E.** Handle
- F.** Body
- G.** Base

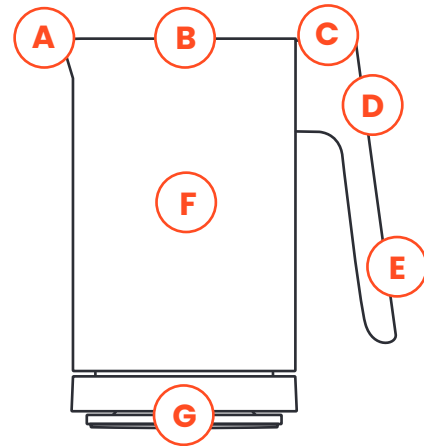

Display

 
- H.** Current water temperature
- I.** The target temperature
Set to 100°C by default.
- J.** "Keep Warm" function activated



Touch-display

- K.** Start/Stop.
Tap to start boiling proces or press stop if you want to stop before the water reaches the set temperature.
- L.** Temperature icon.
Tap to change temperature setting.
Choose between 70°C, 75°C, 80°C, 85°C, 90°C, 95°C or 100°C.



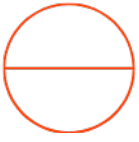

3. Using your kettle



3.1 Preparation before First Use

Follow these steps to clean your new Electric Kettle:

 
1. Fill the kettle with water to the “Max” level (1.2 L) and run a cycle to 100°C.
2. Discard the water and let the kettle cool down completely.
3. Wipe the outside of your kettle with a damp cloth.

Your new Electric Kettle is now ready to use.

3.2 How to use your Electric Kettle

1. Place the kettle on a flat surface.
2. Fill the kettle with water. Remove the kettle from the power base. Push the lid button on top of the kettle to open the lid and fill the kettle with the amount of water you need.
3. Place the kettle back on the power base.
The two displays will now light up and show the current temperature of the water at the top, and you will be able to see the **Start Stop** button and the temperature-selection button, , at the handle.
4. Select temperature. To boil the water, tap  to select your preferred temperature (70°C, 75°C, 80°C, 85°C, 90°C, 95°C or 100°C). By default, the temperature will reach 100°C if no other setting is selected.
5. Press **Start Stop** to start the boiling process.


Note: If the kettle is accidentally turned on without water, it will automatically shut off. The display will turn off and the kettle goes into safety mode. If this occurs, allow the kettle to cool down and wait for the display to light up again before filling it with water and start the boiling again.

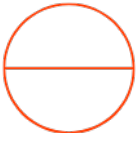

7. Know when the water is ready. You know the water has reached the desired temperature when you hear the sound of a bell.
8. Gently pour the water. Now you can lift the kettle from the power base and gently pour the water into your glass or cup.

3.3 Special Features

Change Temperature

Change your selected temperature while the water is boiling. Tap on  to select between the seven presets. This will not stop the boiling process unless you select a lower temperature than the current.

You can also follow the temperature on the display as it heats up and tap **Start** **Stop** whenever you want.

 
Sleep Function

The kettle's sleep function turns off the display and control panel when not in use. A proximity sensor will detect movement when you get close with your hand, and turn it back on.

“Keep Warm”

Once the water has reached the target temperature, the **Keep Warm** function will keep the water temperature until the kettle is lifted from the base, for up to 30 minutes. The “Keep Warm” function is not available when the target is set to 100°C.

After 30 minutes the “Keep Warm”-icon will be replaced by the current temperature.

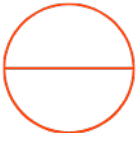

4. Care and Maintenance

Regular cleaning of your Electric Kettle will extend its lifespan.

4.1 Cleaning

When cleaning the kettle and power base daily, you should use a damp cloth to wipe off any dirt.

4.2 Descaling your Kettle

To maintain your kettle's efficiency, it should be descaled periodically, as mineral deposits from tap water can form scale at the bottom.

 
You can use a commercially available descaler by following the instructions on the product's packaging.

Alternatively, you can descale your kettle using white vinegar with the following steps.

1. Fill the kettle to "Min" amount with an equal amount of white vinegar and water, ensuring the bottom is completely covered.



- Do not open the lid while the water in the kettle is hot.
- The kettle may be stored on the power base when not in use.
- Ensure power supply is turned off when kettle is not in use.
- Always disconnect the appliance from the power outlet before cleaning it.
- Let the kettle cool down completely before cleaning.

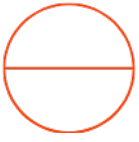

2. Leave the solution in the kettle for at least 3 hours, or overnight.
3. Discard the mixture.
4. Fill the kettle with clean water up to the maximum level and bring it to a boil.
5. Discard the water.
6. Repeat this process until the vinegar smell is completely gone.
7. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

 
5. Disposal Guide

If your product can't be used any longer, dispose of it responsibly with the environment in mind.

- Proper disposal helps conserve resources and prevents harm to health and the environment from hazardous materials.
- Electronic equipment must be disposed of as Waste Electrical and Electronic Equipment (WEEE) and should not be mixed with household waste.
- Take your old appliance to your Local Authority Civic Waste Site for correct sorting and processing.



- Do not use any poisonous cleaner.
- Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle.
- Never immerse the kettle, power cord or power base in water.

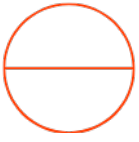

6. Power Consumption

1. Power consumption when the device is plugged in, but the display is in sleep mode (black): 0.33 W
2. Power consumption during a boiling cycle to 100 degrees: 2200 W

Warranty

In accordance with the EU Consumer Sales Directive (1999/44/EC), you, as a consumer, have the right to make a warranty claim for 2 years from the date of purchase if the product has any faults or defects that are not caused by improper use. If the product is found to be defective within this period, you are entitled to a repair, replacement, or, in some cases, a refund.

To claim your warranty, please contact the retailer where the product was purchased or the manufacturer, if specified in the warranty terms.

The warranty does not cover damage caused by misuse, accidents, or normal wear and tear.



The manufacturer declines all liability for damage to persons or property caused by:

- Use of the appliance other than the one envisaged.
- Not having read the user manual.
- Tampering with any part of the appliance.
- Use of non-original spare parts.
- Not following the safety instructions.