


Adjusting the legs on Grossman 62 collection

If the table or drawer is not standing with all 4 legs on the floor it is necessary to adjust one or more of the legs.

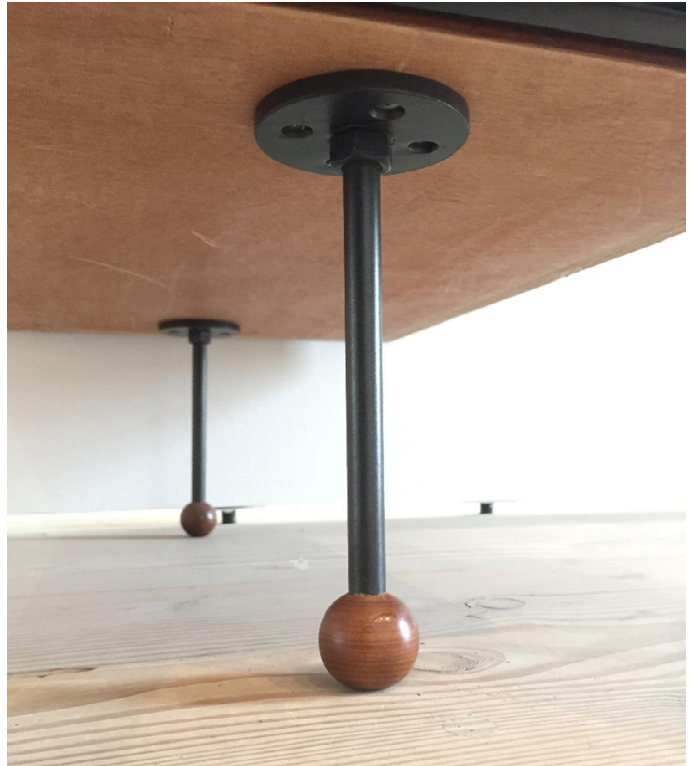

Using a suitable wrench loosen the counter nut at the top of the leg.



Adjusting the legs on Grossman 62 collection

It is now possible to screw the leg in or out of the base plate.

Please make sure that all 4 legs are now touching the floor. If floor is very uneven, it might be necessary to adjust not just one but two legs.



Tighten the counter nut.

