

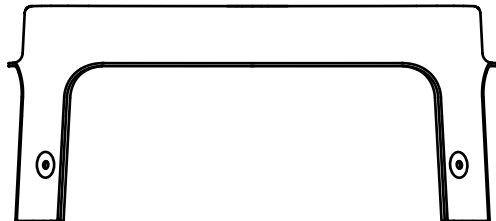



A
X1



B
X4



C
X8




D
X8



E
X1

F
X1



1




Stick all screws first, then
screw them tight.

Primer apuntar todos los
tornillos, después apretarlos
fuerte.

Planter toutes les vis
d'abord et ensuite les visser
serré.

Alle Schrauben zuerst
stecken, dann sie fest
eindrehen.

Prima puntare tutte le viti,
poi stringerle forte.

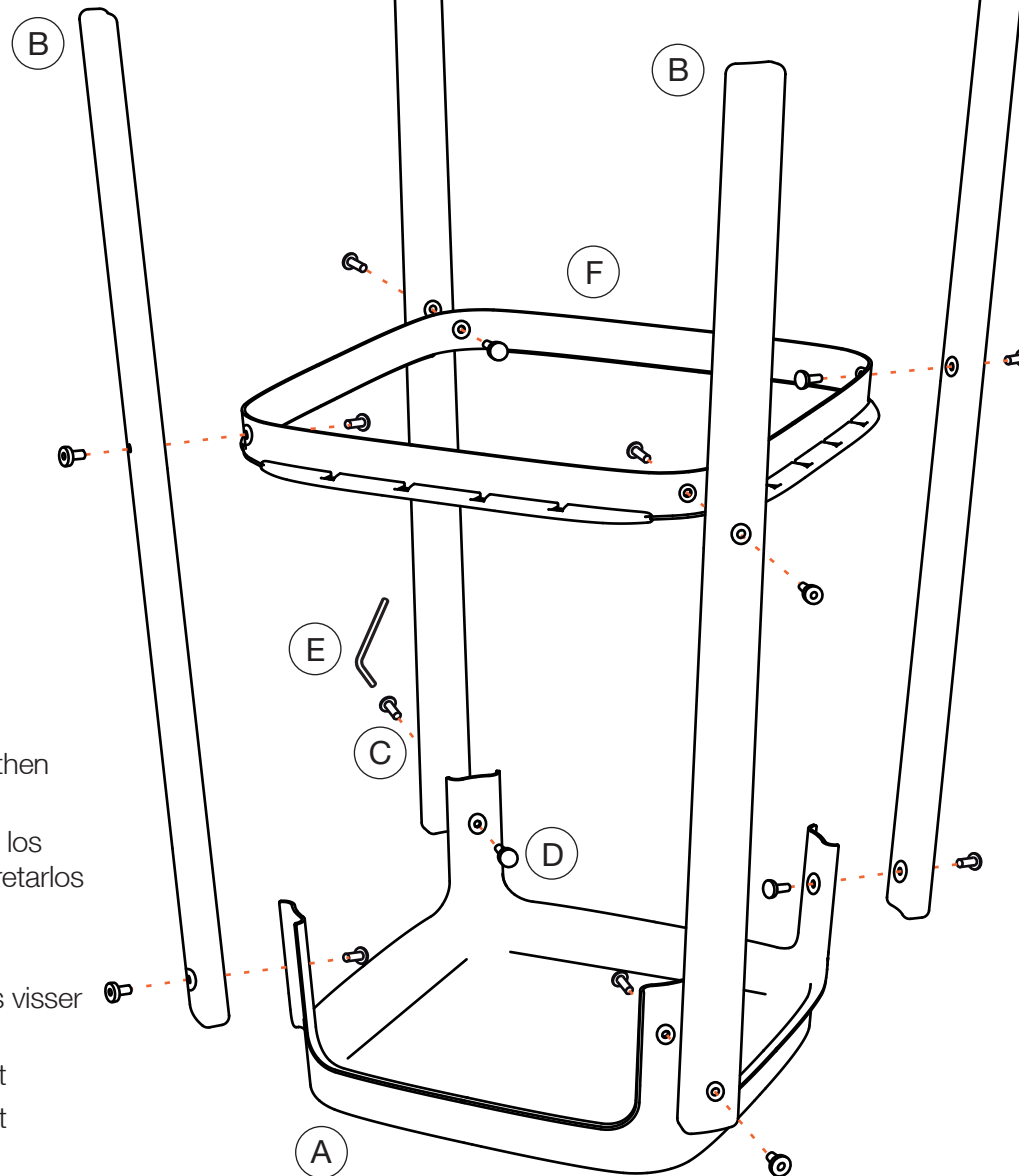

2

